Quick Start Guide

Version 1.0

HYDROMETTE

BL HT 71



EN

GANN MESS- U. REGELTECHNIK GMBH

70839 GERLINGEN SCHILLERSTRASSE 63 INTERNET: http://www.gann.de

Verkauf National: TELEFON 07156-4907-0 TELEFAX 07156-4907-40 EMAIL verkauf@gann.de
Verkauf International TELEFON +49 7156-4907-0 TELEFAX +49 7156-4907-48 EMAIL sales@gann.de

Disclaimer

GANN Mess- u. Regeltechnik GmbH does not make any assurances or warranties with respect to this document and, to the extent permitted by law, limits its liability for breach of any implied warranty to the replacement of this document with another. Furthermore, GANN Mess- u. Regeltechnik GmbH reserves the right to revise this publication at any time without having to notify anyone about such revisions.

The information provided in this documentation includes general descriptions and/or technical characteristics for the performance of the equipment described herein. This documentation cannot be used as a proper assessment of the suitability or reliability of the equipment for a specific application by a user and must not be used as a substitute for such an assessment. It is the responsibility of any such user to carry out an appropriate and complete risk assessment, evaluation and testing of the equipment with regard to his specific application. Neither GANN Mess- u. Regeltechnik GmbH nor any of its partner or subsidiary companies can be made responsible or liable in the event of misuse of the information contained in this document.

All relevant national, regional and local safety regulations must always be observed when installing and using this device. For reasons of safety and to ensure compliance with the documented system data, only the manufacturer is authorised to carry out repairs to components. Failure to observe this information may result in injury or damage to the equipment.

Copyright © 2026 GANN Mess- u. Regeltechnik GmbH, Gerlingen
All rights reserved. No part of this publication may be reproduced, processed or distributed in any form, including photocopying, recording or any other electronic or mechanical process, without the written permission of the publisher. Requests for permissions must be made in writing to the publisher at the address given on the title page.

Table of Contents

1 Foreword 4

1.1 Explanation of the General Warnings 5

1.2 Specific Warnings 5

2 Device Layout and Button Assignment 6

2.1 Display Symbols 7

2.2 Switching the Device On and Off 8

2.3 Menu Guidance 8

2.4 Material Selection 9

2.5 Basic Measurement 10

2.5.1 Measuring Process 11

3 Using the Hydromette BL HT 71 11

1 Foreword

This quick start guide contains an overview of the most important functions of the Hydromette BL HT 71. It only contains parts of the legal and safety-relevant information and has been abridged for better readability. A complete digital version of the operating instructions is available on our homepage in the download area (in **English**: pdf. file with **EN** extension):

https://www.gann.de/en/products/handhelds/electronic-moisture-meters/blue-product-series/bl-ht-71#downloads

Only use the device if you have read and understood all legal and safety-related information in the complete operating manual.

1.1 Explanation of the General Warnings

The following danger levels are used in this quick start guide to indicate potentially dangerous situations and important safety instructions:

Danger Level	Description
 **DANGER**	**Danger / Indicates a hazardous situation which, if not avoided, will result in death or serious irreversible injuries.**
 **WARNING**	Warning / Indicates a hazardous situation which, if not avoided, could result in death or serious irreversible injuries.
 **CAUTION**	Caution / Indicates a hazardous situation which, if not avoided, could result in minor or moderate injuries.
 **INFORMATION**	Indicates important information.

1.2 Specific Warnings


CAUTION

There is a risk of injury from the measuring pins of the electrodes for resistance measurement, e.g. due to careless handling when piercing / knocking into the material to be measured. Before the electrode pins are pressed / knocked into walls or ceilings (e.g. wooden panels or similar), it is essential to ensure by suitable means that there are no electrical cables, water pipes or other supply lines in this location.

2 Device Layout and Button Assignment

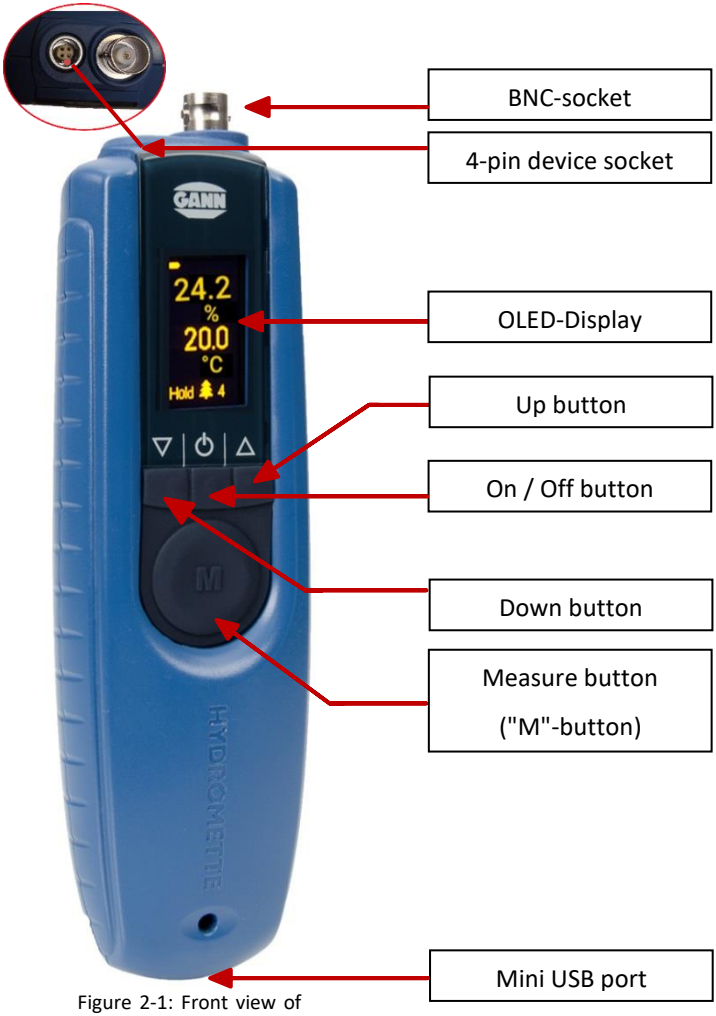

Figure 2-1: Front view of the Hydromette BL HT 71

2.1 Display Symbols



Battery level indicator

Measured value in % by wt.

Wood temperature compensation in °C

"Hold" symbol; Measured value is held; Ready for measurement

Material ID

Wood symbol

Figure 2-2:
Main menu symbols

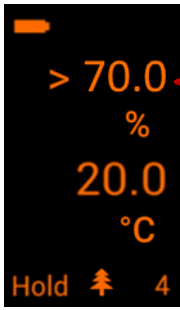

„>“ material-specific upper limit

Figure 2-3: Other symbols upper measuring range



„<“ material-specific lower limit

Memory symbol

Figure 2-4: Other symbols for lower measuring range

2.2 Switching the Device On and Off



Figure 2-5: Start screen

The device is switched on and off by pressing the "**On / Off**" button ⏻.

The GANN logo is shown on the display while the device is starting up. The device name and the installed firmware version are also displayed. After switching on, the Hydromette BL HT 71 always starts in the last menu opened. When the device is started for the first time, the Hydromette starts in the basic measurement mode.

2.3 Menu Guidance

The device must be switched on in order to make menu selections. Starting from the measurement menu, you can access other menus by pressing *the* "***Up***"or "***Down***" *buttons*.

Each menu selection must be confirmed by briefly pressing the **"*M*"** button. To leave a menu, either confirm the (changed) menu selection by pressing the "Measure" button or select the **"*Return*"** symbol using the "***Up***" or "***Down***" buttons and confirm by pressing the **"*M*"** button.

Menu selection overview:

1. **Measuring Menu** (Main Menu): The measuring process can be performed here.
2. **Settings:**
   - **Material**: Selection of the different wood species for the resistance measurement.
   - **Mode**: Selection of the different measurement modes.
   - **Temp.:** Setting the wood temperature for compensation during resistance measurement.
   - **Brightness**: Setting the menu brightness.
   - **Language**: Setting the menu language.
3. **Average value:** An average of up to five measurements can be output here.
4. **Batch:** Activation or deactivation of up to five measurements can be output here.
5. **Memory:** Contains the last ten measurements that were not saved in batches.

2.4 Material Selection

The desired material can be selected in this menu by selecting the corresponding material ID or wood species. Several species of wood are grouped in grades 1 to 7. The corresponding material assignment is made using the wood species table supplied with the device. The "Material selection" menu item is not available for batch measurements for which at least one measured value has

already been saved. This means that measurements of different materials cannot be saved in a list.

The following materials are available for **resistance measurement**:

		Display in:
1	Wood species 1	wood moisture in weight % / bone-dry
2	Wood species 2	
3	Wood species 3	
4	Wood species 4	
5	Wood species 5	
6	Wood species 6	
7	Wood species 7	
31	Wood species 1	wood moisture in % of water content
32	Wood species 2	
33	Wood species 3	
34	Wood species 4	
35	Wood species 5	
36	Wood species 6	
37	Wood species 7	

2.5 Basic Measurement

The basic measurement is the standard measurement function. This is suitable for quick measurements that do not require documentation of the results. The last 10 measured values are simply stored in a ring memory.

2.5.1 Measuring Process

A new measurement is started by pressing the **"M"** button *(> 2 seconds).* During the measurement process, the **"Hold"** symbol disappears from the display. After releasing the **"M"** button, the measured value is held and automatically saved in the ring memory. The oldest stored value is overwritten. The **"Hold"** symbol is displayed again.

The descriptions for batch measurement and average value measurement can be found in the complete operating instructions.

3 Using the Hydromette BL HT 71



When measuring wood moisture, the two measuring pins must be pushed / hammered into the wood to be measured at right angles to the fibre direction. Please refer also to the notes on wood moisture measurement in the full operating instructions.

Figure 3-1: Wood moisture measurement – perpendicular to direction of fibres

INFORMATION

For a reliable measurement result, the measurement button must be pressed for at least two seconds. If the material is very dry, the measuring button must be pressed for up to eight seconds.

INFORMATION

Do not completely drive in the electrode pins! To rule out the effects of surface moisture and avoid measurement errors, there should be a gap of at least 1–2 mm between the wood surface and the hexagon nut.



Figure 3-2:
Use of Teflon-insulated pins

GANN MESS- U. REGELTECHNIK GMBH
70839 GERLINGEN SCHILLERSTRASSE 63 INTERNET: http//www.gann.de
Verkauf National: TELEFON 07156-4907-0 TELEFAX 07156-4907-40 E-MAIL: verkauf@gann.de
Verkauf International: TELEFON +49-7156-4907-0 TELEFAX +49-7156-4907-48 E-MAIL: sales@gann.de